

7. OPTIONAL EQ.

7. 0. MISC.

**NO-TILL COULTER
CLOD REMOVERS
RESIDUE MANAGER
NO-TILL LINKAGE**

7. 1. ROW MARKERS

7. 2. AIR INSECTICIDE

7. 3. GRANULAR INSECTICIDE

7. 4. MICROSEM INSECTICIDE


7. 5. DRY FERTILIZER

7. 7. LIQUID FERTILIZER

OPTIONAL EQUIPMENT

NO TILL COULTER

Unit Mounted

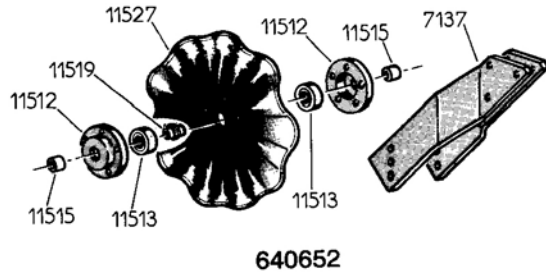

PART No. DESCRIPTION

7137	Unit mounting coulter support
11512	Hub Disc
11513	Bearing (6204 -2RS)
11515	Spacing Ring Coulter
11519	Spindle, Coulter blade
11527	Coulter blade, 14'
640652	Complete Coulter

SPACERS


Front and Rear Spacers are used to hang accessories from a 2" x 2" diamond toolbar. The spacers are mounted on the 5" x 5" main frame toolbar.

PART No. DESCRIPTION

900034.2	Front spacer, 2" x 2" Diamond bar for 7 x 7 planter.
900033.1	Rear spacer, 2" x 2" Diamond bar for 7 x 7 planter.


CLOD REMOVERS

The function of the clod remover is to clear the surface of the soil, but not plow a furrow. It is rigid and mounted in front of the disc openers that push clods away in preparation for the seed trench. The front brace of the clod remover is an independent adjustable opening knife that used to slice open hard soil and move stones away from the track of the disc opener. The clod remover should be adjusted according to soil type. The use of a clod remover in very rocky soils may be a problem due to clogging and blocking. In that event, it is better to mount a flexible support bracket for the clod remover as shown below.

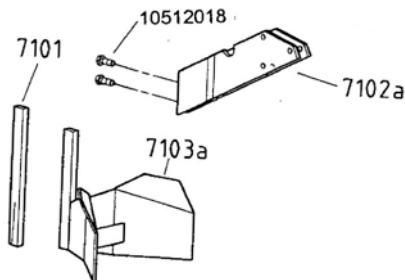

PART No. DESCRIPTION


7101	Front point, clod remover
7102a	Mounting bracket, clod remover
7103a	Clod remover
10512018	Bolt , 10x35
650996	Complete clod remover

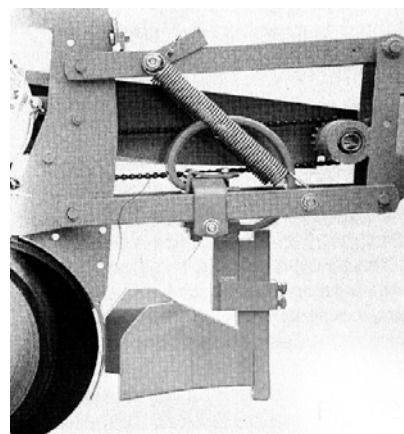

OPTIONAL EQUIPMENT


RESIDUE MANAGER

Residue managers are available for minimum and no-till situations.

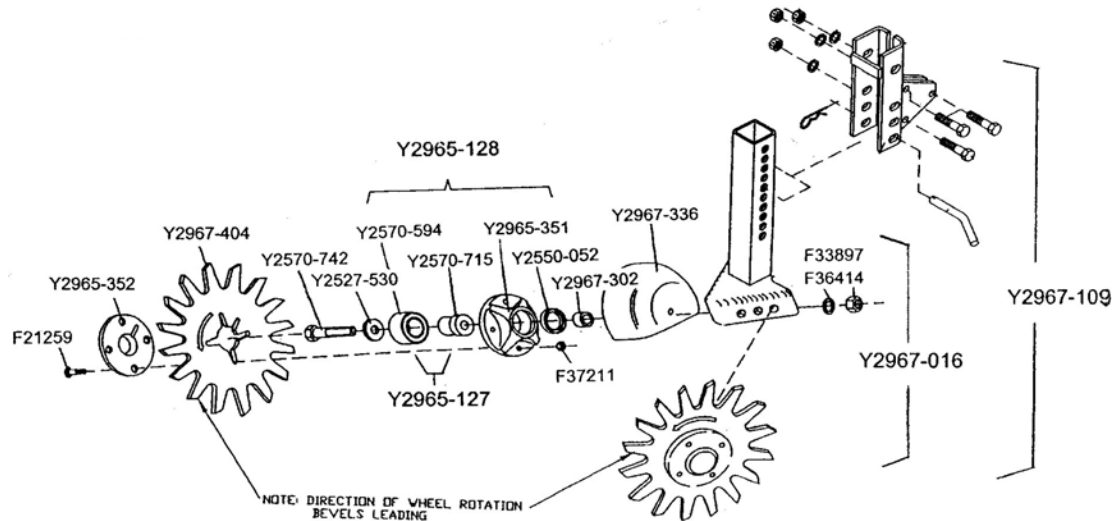

PART No.	DESCRIPTION
Y2967-109	Residue manager assy complete w/ mnt bracket

F13110	Bolt, 3/8 -16 x 1 3/4 Gr. 5
F13209	Bolt, 1/2- 13 x 1 1/2 Gr. 5
F13217	Bolt, 1/2- 13 x 3 1/2 Gr. 5
F21259	Carriage bolt, 5/16 -18 x 1 1/2 Gr. 5
F33861	Flat washer, 1/2
F33893	Lockwasher, 3/8
F33897	Lockwasher, 5/8"
F36406	Nut 3/8- 16
F36414	Nut, 5/8- 11
F37211	Rev lock nut, 5/16- 18
F37214	Rev lock nut, 1/2- 13
Y2526-402	Machine bushing, 9/16 ID x 1 3/4 OD x 1/4
Y2527-530	Machine bushing, 3/16"
Y2550-052	Seal for hub and bearing
Y2570-448	Hairpin, 1/8"
Y2967-404	Spoke wheel, 13" dia
Y2570-594	Bearing
Y2570-715	Insert for bearing
Y2570-742	D bolt, 5/8- 11 x 4" Gr. 5
Y2965-127	Bearing and insert assy
Y2965-128	Hub and bearing assy
Y2965-305	Pin
Y2965-351	Hub
Y2965-352	Hub cap
Y2967-016	Residue manager assu less mounting bracket
Y2967-200	Stem
Y2967-211	Mounting bracket for No-till parallel linkage
Y2967-245	Mounting bracket only
Y2967-302	Spacer, 3/4"
Y2967-336	Bearing shield

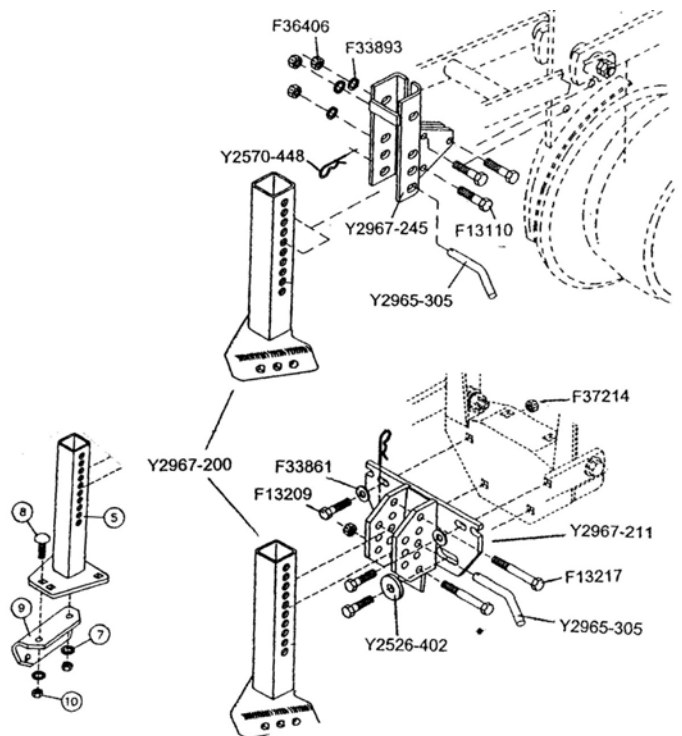


PART No.	DESCRIPTION
5	Y2967-234 Single Wheel Arm WA
7	Y2525-352 1/2 Medium Lockwasher ZP
8	Y2505-339 1/2- 13 x 1 1/2 Car. Clt GR 5 ZP
9	Y2967-405 Wheel Mount
10	Y2520-352 1/2- 13 Hex nut ZP

OPTIONAL EQUIPMENT

7" X 7" Toolbar Frame

NO TILL LINKAGE

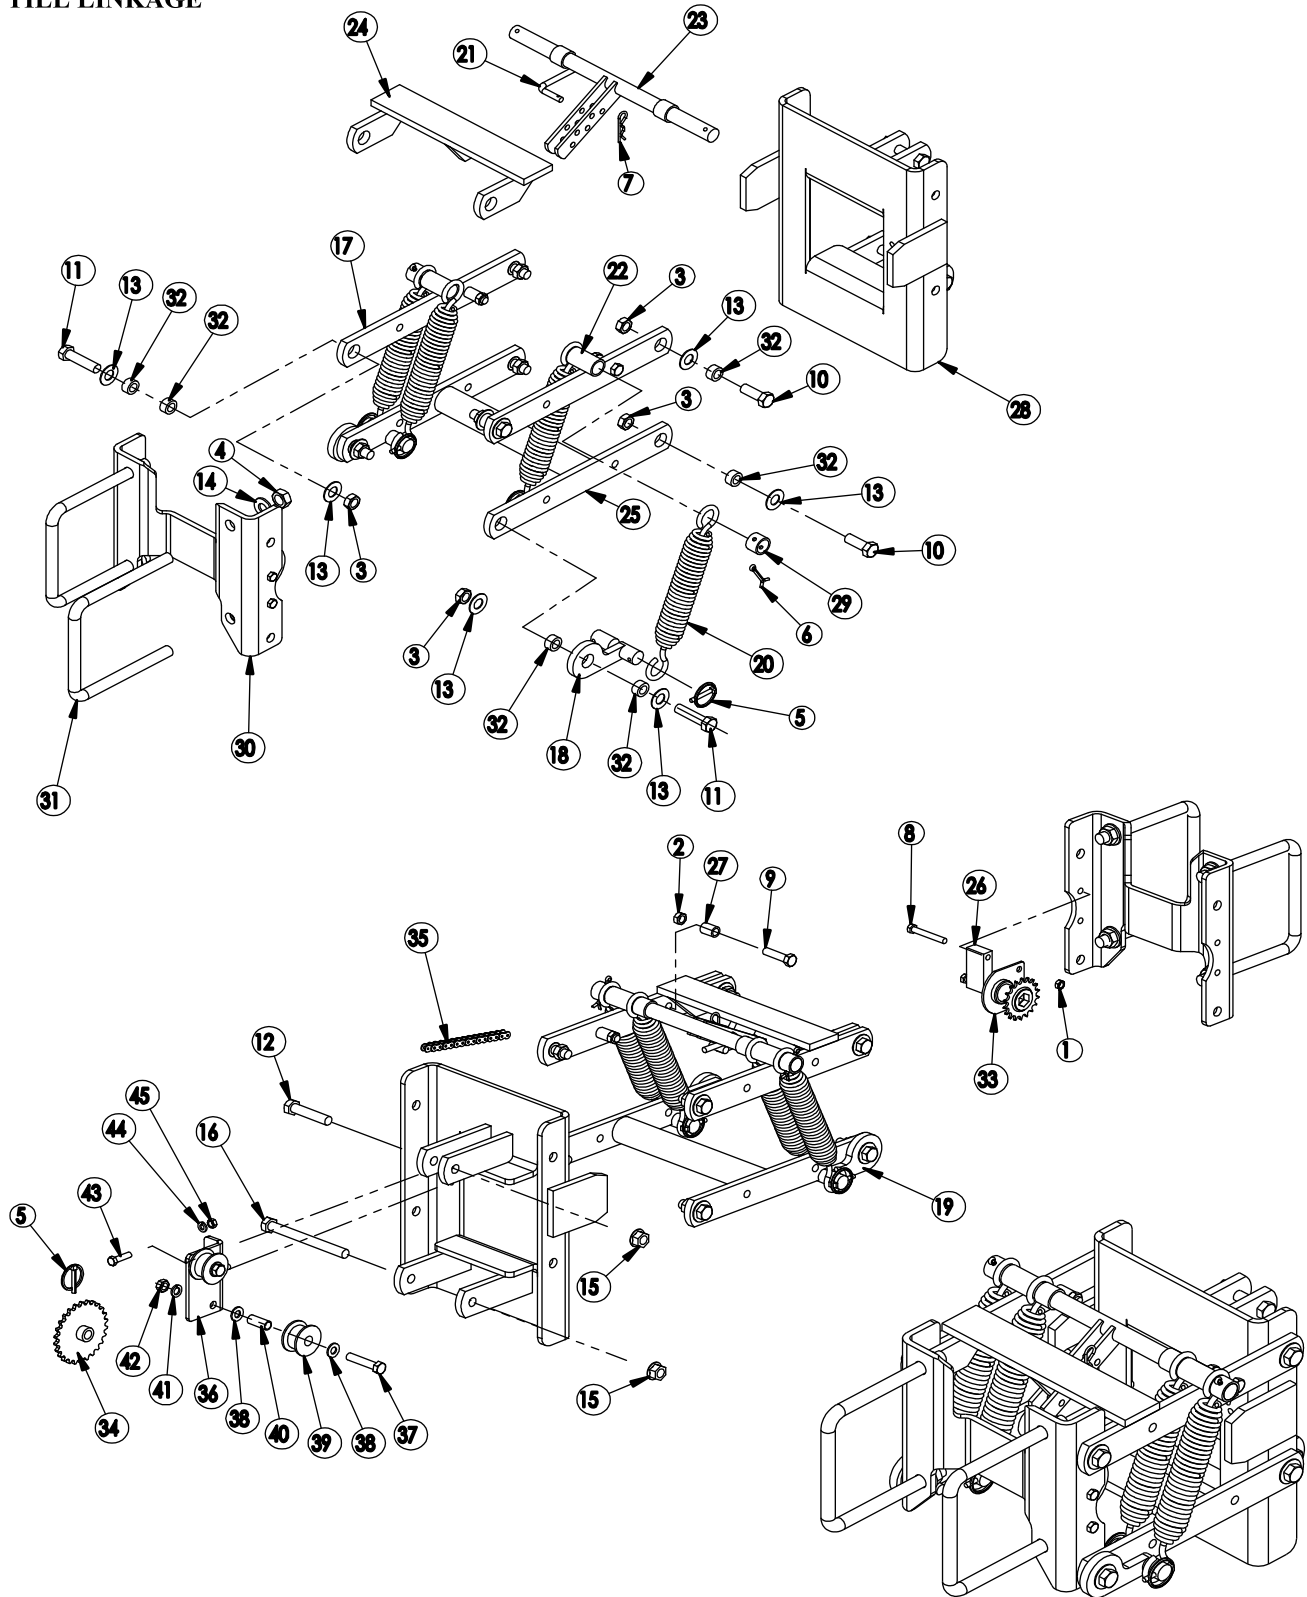

OPTIONAL EQUIPMENT

7" X 7" Toolbar Frame

NO TILL LINKAGE

ITEM	PART No.	DESCRIPTION
1	F37264	Top lock nut, 3/8-16
2	F37268	Top lock nut, 1/2-13
3	F37272	Top lock nut, 5/8-11
4	F37274	Top lock nut, 3/4-10
5	6077	Lynch pin, 1/4 x 1 1/4
6	F65147	Cotter pin, 1/4 x 2
7	L1-557-010403	Hairpin, 1/8
8	F13114	Hex bolt, 3/8-16 x 2 3/4
9	F13211	Hex bolt, 1/2-13 x 2
10	F13310	Hex bolt, 5/8-11 x 1 3/4
11	F13313	Hex bolt, 5/8-11 x 2 1/2
12	F13315	Hex bolt, 5/8-11 x 3
13	F33863	Washer 5/8"
14	F33864	Washer 3/4"
15	F37349	Nut, flange head 5/8-11
16	F13326	Hex bolt, 5/8-11 x 6 1/2
17	L124546	Parallel arm
18	L124591	Spring anchor LH
19	L124592	Spring anchor RH
20	L124630	Spring
21	L124643	Pin, spring adjustment
22	L124645	Spacer
23	L124686	Spring bar
24	L124687	Front bar
25	L124700	Lower parallel arm
26	L124708	Spacer block sprocket
27	L124709	Spacer bushing
28	L124729	Baseplate
29	L125007	Bushing
30	L125158	Mounting plate
31	4502.SA	U-bolt, 7 x 7 x 3/4
32	L71505214	Bushing 1" OD x 17/32"
33	KA1720	Bearing sprocket
34	7110.S	Sprocket, 27 tooth #41 chain
35	900259	Chain, #41 x 124 links
36	800310	Roller bracket
37	F13213	Hex bolt, 1/2-13 x 2 1/2
38	F33012	Washer, 1/2"
39	KD0916	Chain roller
40	E7523.1	Bushing, 38mm
41	F33626	Lock washer, 1/2"
42	F37214	Reversible lock nut, 1/2-13
43	F13107	Hex bolt, 3/8-16 x 1 1/4
44	F33622	Lock washer, 3/8"
45	F36406	Hex nut, 3/8-16
	L124846	Linkage and spring kit (less sprocket, chain, and rollers)

ROW MARKERS


5"x 5" Mounted Frame

The hydraulic row markers are available in 3 sizes:
Short single fold (4-row),
Medium single fold (6-8 row)
Long double fold (10-12 row).



A single remote can be used with either a 3-way directional valve or a sequence valve.

With a double remote, you can raise or lower each row marker independently. Both row markers and controls can be in operation at the same time.

The small marker for frames of 11'6" (3m50) and medium marker for frames of 20' (6m10) are shown below. Normally these row markers are mounted at the end of the toolbar. However, optional mounting bracket **(1)** can be provided for positioning the row marker in front of the toolbar in the case of narrow rows.

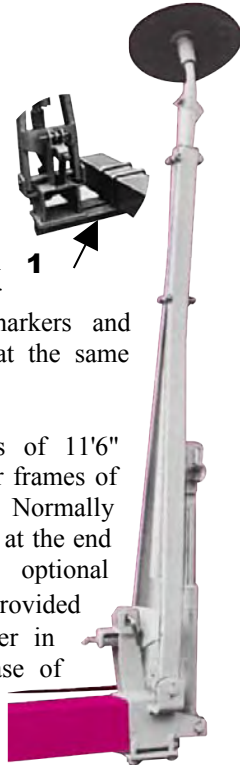


Folding for markers for larger planters with double toolbar frames of 8-12 rows are mounted on the upper toolbar of the double toolbar frame.

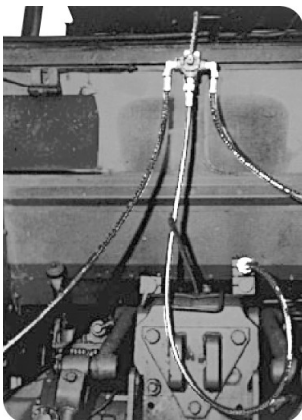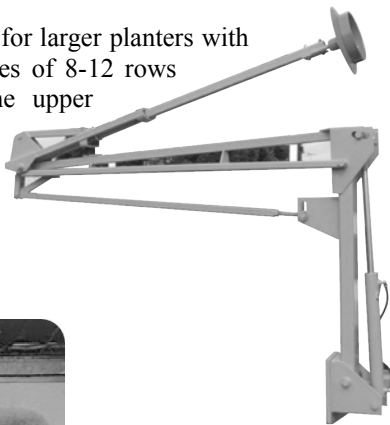

A 3-way directional valve mounted on the tractor to direct the hydraulic row markers is shown to the left. This is a single acting hydraulic system.

A sequence valve to automatically alternate the hydraulic row markers is shown below.

NOTE: This valve is sensitive to impurities in the oil.

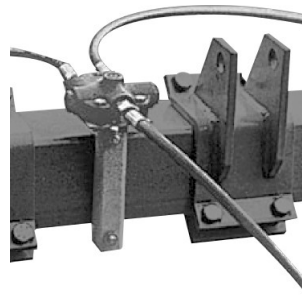

NOTE: Each cylinder is furnished with a flow reducer inside the hydraulic fitting. Blockage of the hole of the flow reducer by dirt or impurities will result in malfunction of the row marker cylinder.

When removing for cleaning, place the flow reducer in its original position with the internal snap ring up (visible when inserted).

ROW MARKER ADJUSTMENTS

The row marker length is determined by multiplying the number of rows by the row spacing (in inches). This figure should be equal to the distance from the end of the marker blade to the centerline of the planter. Adjust the left and right row markers equally to the determined length.

Example:

6 rows x 30" row spacing = 180".

Row marker extension from center of planter to end of row marker blade should be 180".



WARNING To avoid injury, stand clear and keep others away when raising or lowering markers. Lock row markers for transport using the locking sleeve or locking pin.



WARNING Use extreme care when operating the row markers near electrical lines.






WARNING Hydraulic fluid escaping under pressure can penetrate the skin causing serious injury. Relieve pressure before disconnecting hydraulic lines. Tighten connections before applying pressure. If injured by escaping hydraulic fluid see a doctor at once. Gangrene can result. Wear proper hand and eye protection when searching for leaks. Use wood or cardboard instead of hands.






ROW MARKERS

5"x 5" Mounted Frame




MANUAL VALVE SMALL MARKER

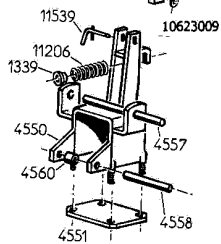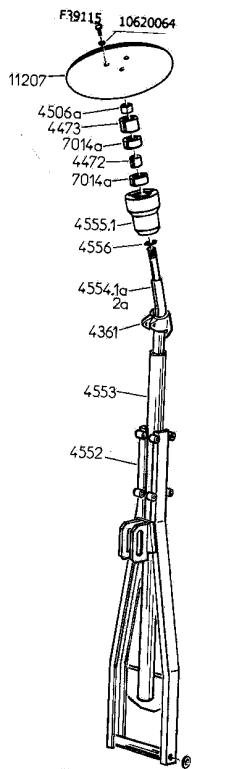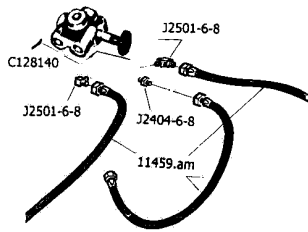

SEQUENCE VALVE MEDIUM MARKER

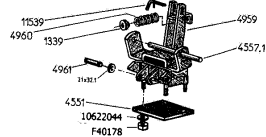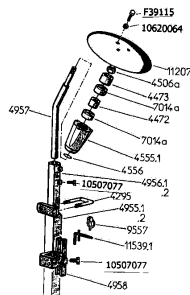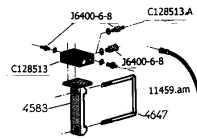

LARGE MARKER

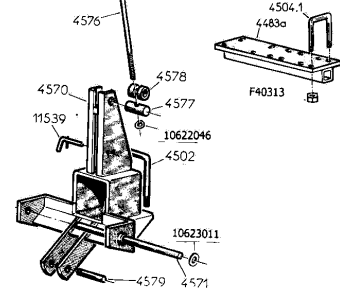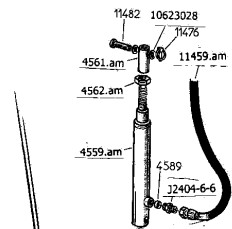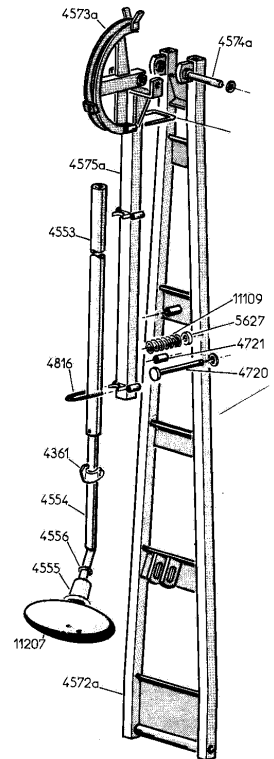

ROW MARKERS

5" x 5" Mounted Frame






PART No.	DESCRIPTION	PART No.	DESCRIPTION
1339	Bushing (B11)	4720	Stop shock absorber
4295	U bolt, 12mm	4721	Slide bushing
4361	Adjustable clamp for row marker	4816	Locking clamp row marker tube
4472	Bearing spacer	4954	Main frame, length 4' 3"
4473	Stop ring	4955.1	Tube, 50x50, length 4' 1"
4483.a	Offset support bracket	4955.2	Tube, 50x50 length, 7' 4"
4502	U bolt, 16mm	4956.1	Tube, 40x40, length 4' 3"
4504.1	U bolt, 20mm	4956.2	Tube 40x40, length 5' 9"
4506.a	Nut, 20mm	4957	Shaft
4550	Mounting bracket, single row marker 14' (4m50)	4958	Retractable collar
4551	Mounting plate	4959	Mounting bracket, row marker
4552.1	Support frame short 3'3" (105cm)	4960	Spring
4552.2	Support frame long, 4'7" (140 cm)	4961	Lower pin, row marker
4553.1	Female tube 6'7" (200cm)	5627	Dust cap
4553.2	Female tube 4' (120cm)	7014.a	Bearing
4553.3	Female tube 3'3" (100cm)	9557	Lynch pin
4554.1a	Male tube 5'11" (180cm)	11109	Spring (R59)
4554.2a	Male tube 3'3" (100cm)	11206	Spring, row marker (R75)
4555	Hub, row marker	11207	Disc, row marker
4555.1	Hub, row marker	11459.am	Hydraulic hose, specify length
4556	Washer (rubber O ring)	11459.15a	4' 11" hydraulic hose, with fitting
4557	Pivot pin	11459.35a	11' 6" hydraulic hose with fitting
4557.1	Pivot pin	11459.40a	13' 1" hydraulic hose with fitting
4558	Cylinder pin	11459.50a	16' 5" hydraulic hose with fitting
4559	Row marker cylinder, to 1992	11459.6	19' 6" hydraulic hose with fitting
4559.1	Seal key hydraulic row marker to 1992	11476	Lynch pin
4559.am	Row marker cylinder 1992 on	11482	Pin, 19x65
C4C0872	Seal key hydraulic row marker 1992 on	11539	Row marker pin
4589	Flow reducer non-adjustable	11539.1	Row marker pin
J2404-6-6	Hydraulic fitting	C128140A	Manual sequence valve with fittings
4560	Bushing (B11)	C128140	Manual flow valve
4561.am	Rod end cylinder row marker	J2404-6-6	Hydraulic fitting
4562.am	Locking nut	J2404-6-8	Hydraulic fitting
4571	Lower pivot pin	J2501-6-8	Hydraulic fitting
4572.a	Main frame folding row marker	C128513A	Sequence valve with fittings
4573.a	Pivot section	C128513A	Sequence valve only
4574	Pivot pin	J6400-6-8	Hydraulic fitting
4575.1	Square tubing row marker, 1m50	F39115	Hex bolt, 8x20
4575.2	Square tubing row marker, 1m	F40178	Hex nut, 16mm
4575.3	Square tubing row marker, .80m	F40313	Hex nut, 20mm
4576	Adjustable rod folding row marker	10507077	Hex nut, 14x30
4577	Tightening nut	10620064	Washer, 8.5x16x2
4578	Cross tube for nut	10622044	Washer, 17x30x2
4579	Lower cylinder pin	10622046	Washer, 17x30x4
4583	Sequence valve support	10623009	Washer, 21x32x1
4589	Flow reducer, non adjustable	10623011	Washer, 21x32x2
4596.3	Fitting, metric to american, cylinder row marker	10623028	Washer, 21x40x2
4647	U bolt, 12mm		

AIR INSECTICIDE

SYSTEM ASSEMBLY

The ¼” vacuum hose connects to the bottom port in the back of the vacuum gauge. The filter is to be used in the top port in back of the vacuum gauge. Use plugs in the side ports.

The ¼” pressure hose connects to the top port in the back of the vacuum gauge. Use the filter in the bottom port in back of the vacuum gauge. Use plugs in the side ports.

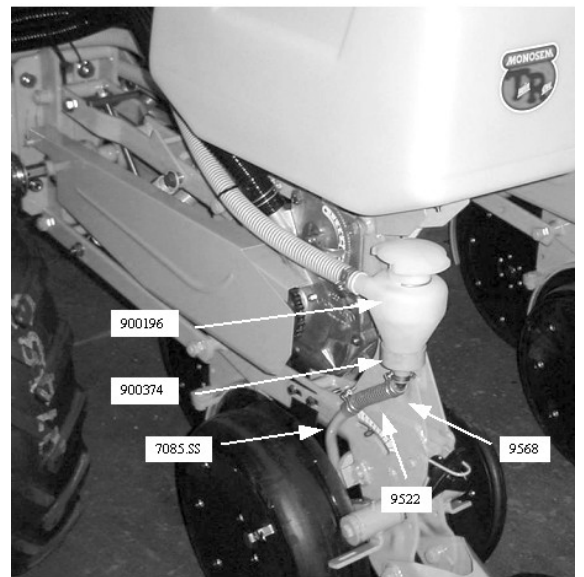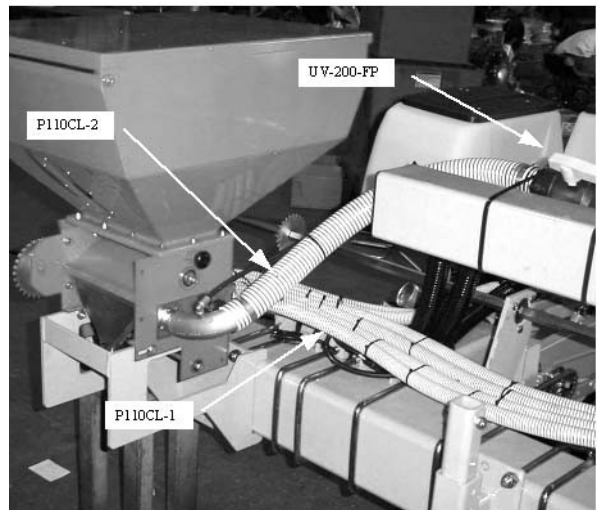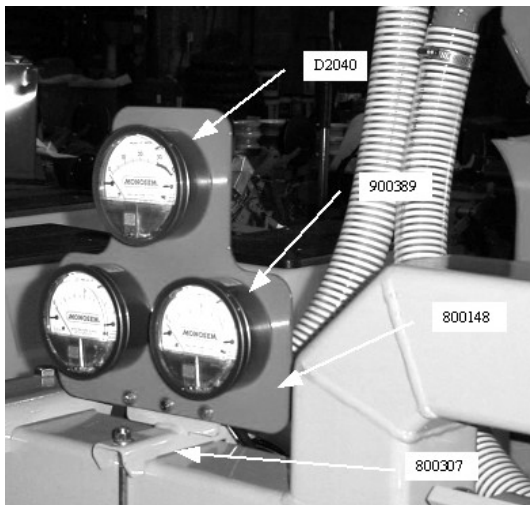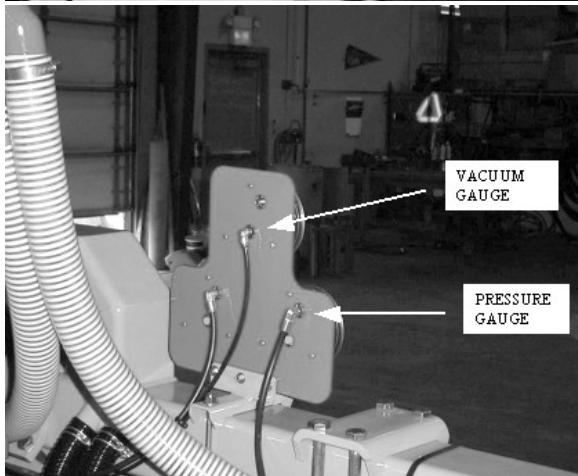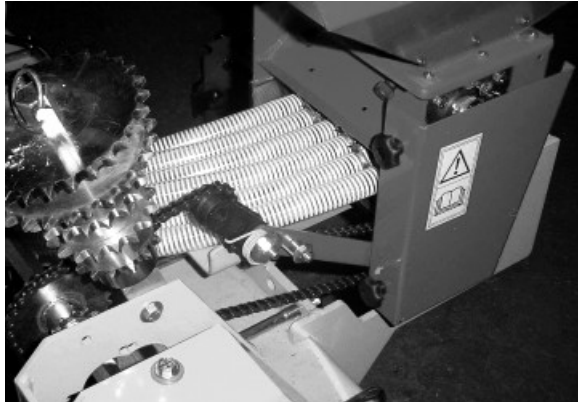


PART NO.	DESCRIPTION
D2040	Vacuum Gauge
90389	Pressure Gauge
800148	Panel Triple Gauge
800307	Bracket Gauge panel
UV-200-FP	2” Ball valve, (requires Fitting TERHB200-200, qty 2)
P110CL-2	2” Hose (Specify Length)
P110CL-1	1” Hose (Specify Length)
UV-200-FP	2” Ball valve, (requires Fitting TERHB200-200, qty 2)
P110CL-2	2” Hose (Specify Length)
P110CL-1	1” Hose (Specify Length)
900196	Cyclone (includes fitting)
900374	Cyclone clamp
7085.SS	Drop tube
9522	Hose (Specify Length)
9568	Hose Clamp


AIR INSECTICIDE

Double Turbofan

PART No.	DESCRIPTION
4401.B	Fan housing (support frame side)
4402.C	Fan housing manifold side
4405.A	Lower shaft (1 3/8" 6 spline adapter)
4407	Bearing 62mm (62062RS)
4408	Bearing 72mm (63062RS)
4409	Snap ring internal 72mm
4410	Spacer upper shaft
4411	Spacer lower shaft
4412.B	Pulley, 500/540rpm Hi-Output 25 grooves 290mm dia.
4413.B	Fan belt, 25 grooves (1244JEJ151)
4437	Key lower shaft (8x7x40mm)
4439.A	Key upper shaft (6x6x45mm)
4440	Special bolt tension adjustment
4452.B	Upper shaft, 25 grooves 29mm dia.
10020595	Lower spacer segment
10020596	Upper spacer segment
10020597	Front spacer segment
10020598	Divider plate
10603010	Nut, 10mm
10603014	Nut, 14mm
10603020	Nut, 20mm
10629007	Washer, 6mm
10629009	Washer, 8mm
10629013	Washer, 12mm
20047970	Lift hook
20048560	Support bar
20048570	Belt guard
20051760	Anti vibration strap
30502016	Bolt, 12 x 25mm
30507076	Bolt, 14 x 25mm
30510099	Bolt, 6 x 40mm
30511000	Bolt, 6 x 45mm
30512021	Bolt, 10 x 50mm
30512080	Bolt, 14 x 45mm
30561061	Carriage bolt, 8 x 50mm
30561062	Carriage bolt, 8 x 55mm
30562047	Carriage bolt, 12 x 30mm
30600006	Nut, 6mm
30600008	Nut, 8mm
30600012	Nut, 12mm
30600014	Nut, 14mm
30620089	Washer, 10.5 x 20 x 2mm
30620095	Washer, 10.5 x 27 x 2mm
30621046	Washer, 13 x 27 x 2mm
30621061	Washer, 13 x 40 x 4mm
30623043	Washer, 22.5 x 48 x 4mm
30624015	Washer, 31 x 41 x 1.5mm
30624016	Washer, 31 x 41 x 2mm
40090315	Screw, 12 x 30mm
65004042	Double fan blade
66005121	Support frame
66009197	Lower bearing housing

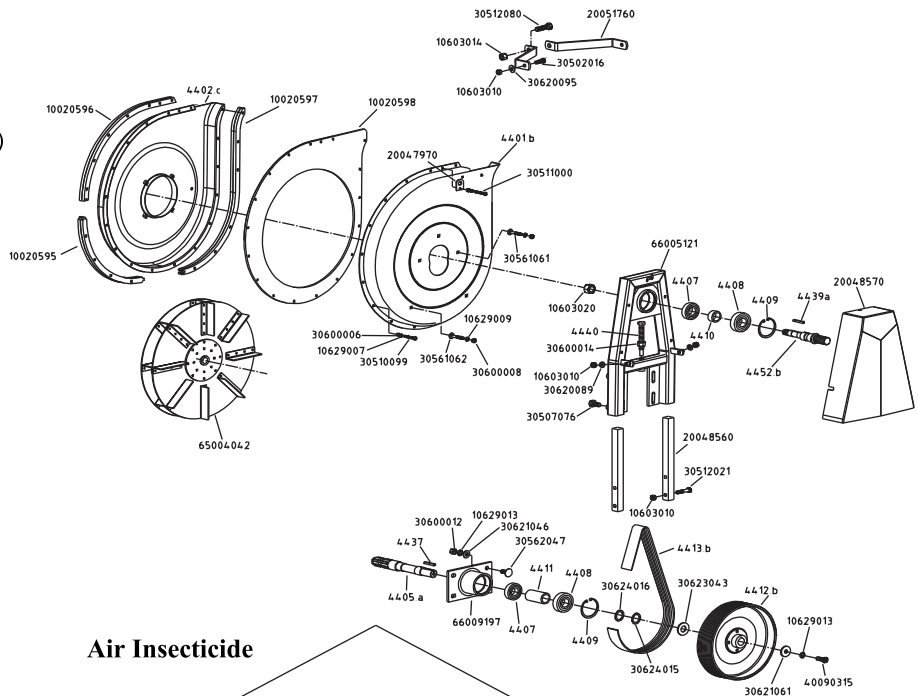

Air Insecticide

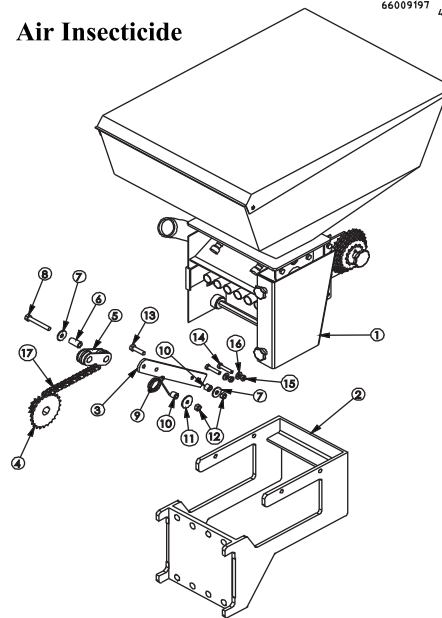

ITEM	PART No.	DESCRIPTION
1	641400	Air Insecticide hopper w/ meter
2	800261	Hopper bracket
3	800123	Idler support arm
4	9555.A	Double Sprocket 12-25
5	KD11962	Idler, US Insect
6	KD1026	Long sleeve tube
7	F33008	3/8" Flat washer
8	F15114	3/8" x 2 3/4" Bolt
9	KD9306	Spring, US Insecticide Idler
10	KD2971-10	Short sleeve tube
11	K10210	3/8" Large Flat washer
12	F37212	3/8" Center lock nut
13	F13109	3/8" x 1 1/2" Bolt
14	F13059	5/16" x 1 1/2" Bolt
15	F37211	5/16" Center lock nut
16	F33114	5/16" Flat washer

US INSECTICIDE SYSTEM

GRANULAR APPLICATION RATES

The US Insecticide System is mounted to the planter unit and has a hand clutch to engage or disengage the metering mechanism for easy removal of the hopper. Be sure no foreign objects get into the hopper when it is being filled with product. Keep hopper lids on when not being filled to prevent accumulation of dirt or moisture in the hoppers.

Many things can affect the rate of delivery of granular chemicals such as temperature, humidity, speed, ground conditions, flow ability of different materials or any obstruction in the meter.

NOTE: Since the chemical meter is driven directly from the seed meter box, changing the seed population after calibrating will change the output of the chemical meter, even if ground speed remains constant.



WARNING! Agricultural chemicals can be dangerous. Improper use can result in injury to persons, animals and soil. Handle with care and follow directions supplied by the chemical manufacturer.

A field check is important to determine the correct application rates. The following method for calibrating is recommended:

1. Attach a plastic bag to each chemical meter outlet tube.
2. Lower the planter and drive 500 feet at the desired seeding population and speed.
3. Weigh (in ounces) the amount of chemical in one bag.
4. Multiply the number of ounces by the factor shown below for your row width.

Row Width	Factor
38"	1.7
36"	1.8
30"	2.2
22"	3

Example: You have driven 500 feet. Your row spacing is 30" and you have collected 4.5 ounces of material in a plastic bag. Multiply 4.5 by the factor 2.2. This would indicate that you are applying 9.9 lbs./acre.

If you do not have the desired amount of chemical per acre, adjust the metering gate accordingly. Zero for minimum output while 45 for maximum output.

It is suggested that after a desired rate is achieved through calibration, you record the ground speed and transmission setting used for the calibration along with the chemical used for future reference.


NOTE: It is important to check calibration of all rows.

ATTENTION: Once you have the proper setting do not vary your planting speed as this will affect the output.

US INSECTICIDE SYSTEM

ASSEMBLY

Single Outlet - Plastic Hopper

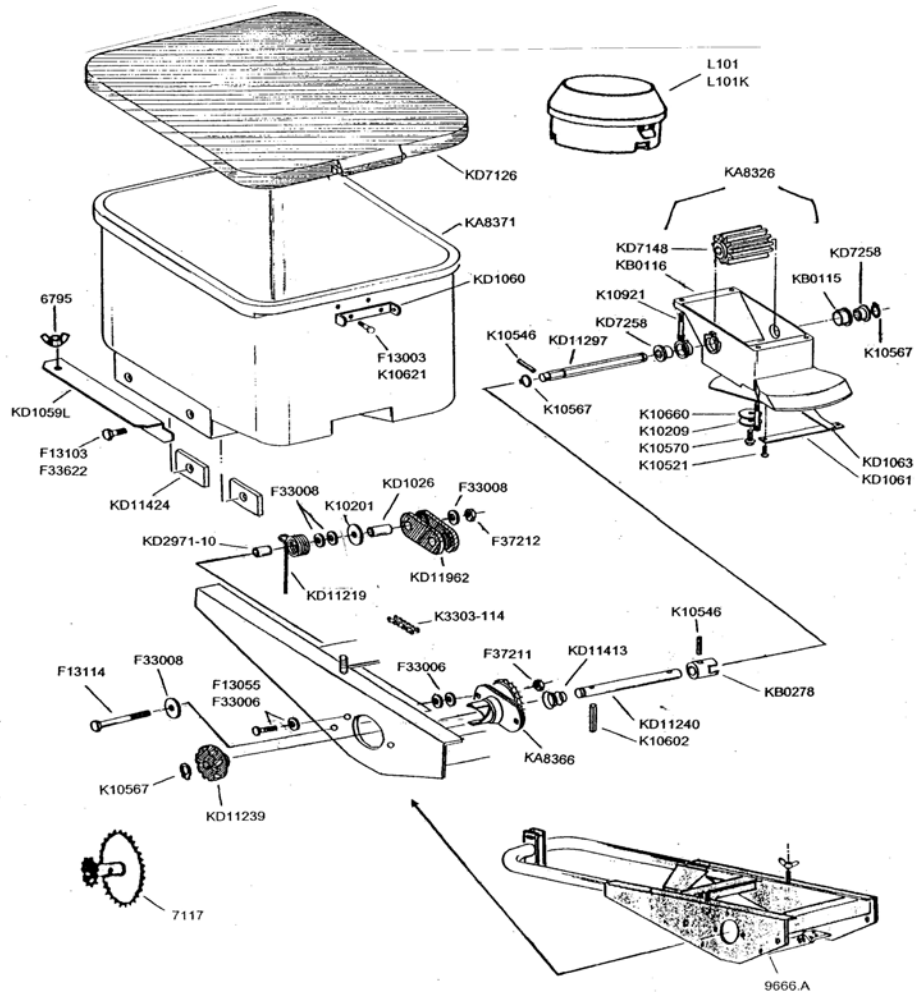

PART NO. DESCRIPTION


6795	Wing nut, 8mm
7117	Double sprocket, 26-12 (replaces 7115)
9666.A	Frame to mount insecticide box
F13003	Bolt, 1/4-20 x 3/4"
F13055	Bolt, 5/16-18 x 1"
F13103	Bolt, 3/8-16 x 3/4"
F13114	Bolt, 3/8-16 x 2-3/4"
F33006	Flat washer, 5/16" USS
F33008	Flat washer, 3/8" USS
F33622	Lock washer, 3/8"
F37211	Lock nut, 5/16-18
F37212	Lock nut, 3/8-16
K10201	Special washer, 3/8" x 1-1/2" OD
K10209	Washer, 1/4" USS
K10521	Self tapping screw, No.10 x 3/8"
K10546	Roll pin, 3/16" x 1-1/4"
K10567	Retaining ring, 5/8"
K10570	Self tapping screw, 1/4" x 3/4"
K10602	Roll pin, 1/4" x 1-1/2"
K10621	Flange nut, 1/4-20
K10660	Wave washer, 1/2"
K10921	Hex socket head bolt, 10-24 x 7/8"
K3303-114	Drive chain, #41, 120 links with conn. link
K7767X	Complete hopper with meter, clutch

PART NO. DESCRIPTION


KA8326	Meter box assembly, complete
KA8366	Lock out clutch assembly, complete
KA8371	Hopper
KB0115	Bearing
KB0116	Granular housing
KB0278	Coupler
KD1026	Spacer, 1-3/16" long
KD1059L	Support, left hand(shown)
KD1059R	Support, right hand
KD1060	Hinge
KD1061	Support strap
KD1063	Metering gate
KD11219	Spring
KD11239	Knob
KD11240	Shaft
KD11297	Shaft
KD11413	Spring
KD11424	Block with threaded hole, 3/8-16
KD11962	Idler
KD2971-10	Spacer, 9/16" long
KD7126	Lid
KD7148	Feed roller, hex bore
KD7258	Hex bushing
L101	Lock-n-load valve only
L101K	Lock-n-load valve mntd on lid #KD7126 meter box to drive insect. meter assy

US INSECTICIDE SYSTEM

ASSEMBLY
Spreader Tube

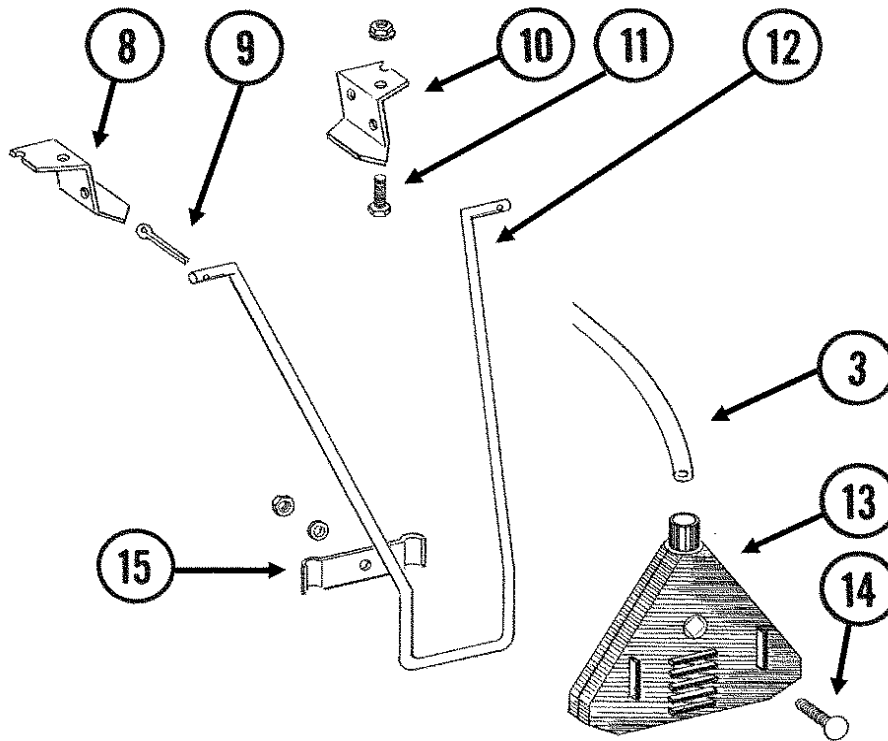

ITEM	PART No.	DESCRIPTION
1	KD2423	Funnel
2	K10680	Hose clamp
3	KD2947	Hose, precut, 7/16" x 28"
4	K10523	Self-tapping screw, 10 -24 x 1/2"
8	KD1115L	Hanger bracket, LH
9	K10452	Cotter pin, 1/8"x 1/2"
10	KD1115R	Hanger bracket, RH
11	K10310	Carriage bolt, 1/4" x 3/4"
	K10227	Lock washer, 1/4"
	K10103	Nut, 1/4"
12	KD8756	Hanger, standard length
13	KA2075	Diffuser, 14" band
14	K10306	Carriage bolt, 3/8" x 2"
	K10229	Lock washer, 3/8"
	K10101	Nut, 3/8"
15	KD118	Clamp plate

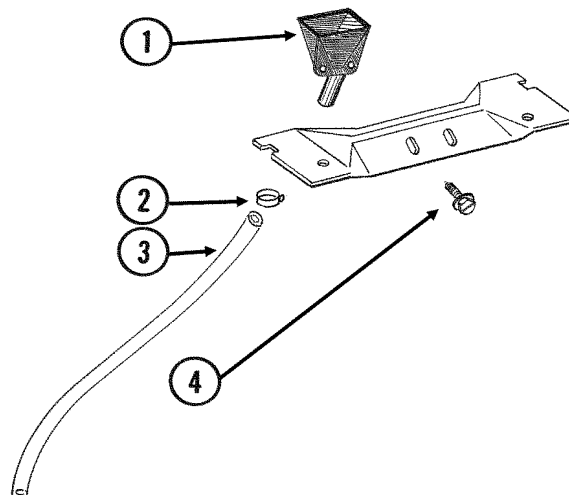

MICROSEM MICROGRANULAR INSECTICIDE SYSTEM

STANDARD MICROSEM SYSTEM

The microsem system meters microgranular products such as insecticide and herbicide with precision. The system is ground driven and has a positive displacement. The output is set by means of a transmission that is unaffected by a change in planting speed. The microsem system is mounted to the toolbar frame with support brackets to reduce weight on the planter unit. The microsem system with auger is equipped with a telescoping outlet, and its output starts from a minimum of 2-3 lbs/acre.

Each microsem hopper has a 33 lb. capacity and can be used with a double outlet for two row units or with a single outlet for one row unit.

The drive sprocket is mounted on the upper hex shaft. The hoses direct the granular product directly between the disc openers via drop tubes, or behind the disc openers via a spreader tube.


INSECTICIDE DROP TUBE

7085.DA Mounts on the right hand side of the unit, with the same bolts that attach the disc scraper. It deposits material down in the seed trench behind the seed tube. The top of the tube points straight up.



7085.GA Mounts on the left hand side of the unit, with the same bolts that attach the disc scraper. It deposits material down in the seed trench behind the seed tube. The top of the tube points straight up.

7085.SS

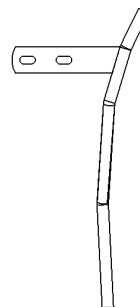


Mounts on the left hand side of the unit, with the same bolts that attach the disc scraper. It deposits material down in the seed trench behind the seed tube. The top of the tube curves towards the rear to accept the feeder hose from the Air Insecticide System.

MICROSEM MICROGRANULAR INSECTICIDE SYSTEM

SETTING THE OUTPUT

The output is a function of the number of rotations of the spindle of the metering boxes, which is set primarily with the double sprocket (1) and the interchangeable sprockets (2). The chart provided will assist with the setting and also indicates the sprockets to be used for the principle commercial products. The furnished information is a recommendation only.

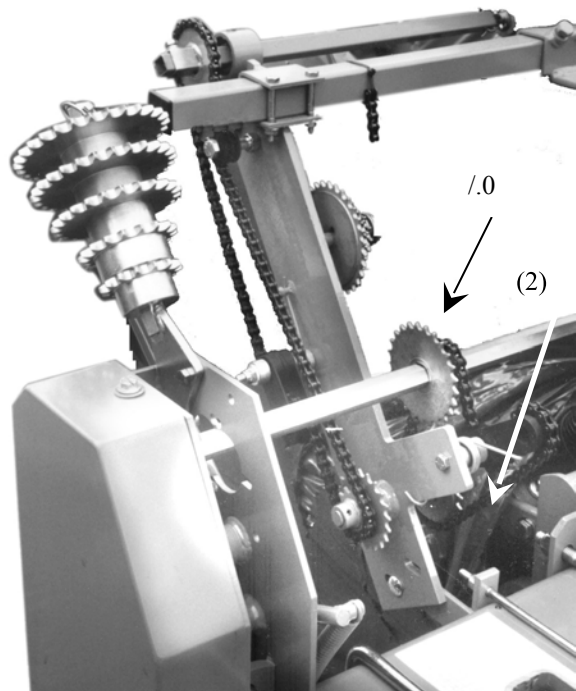

NOTE: Avoid moisture contamination. Moisture in the product will cause hardening and could cause chain breakage. To avoid this problem, empty hoppers and store in a dry place.

NOTE: This unit should be used only with microgranulars and not with powders or granulates. It is possible to meter large granulars provided the inside auger is changed for a special one.



WARNING Agricultural chemicals can be dangerous. Improper use can result in injury to persons, animals and soil. Handle with care and follow instructions of the chemical manufacturer.

HOW TO TEST FOR INSECTICIDE RATES

Measure out a distance of 328 feet (100m).

Set the sprocket combination to: A=12, B=30, C=12. (This ratio = 0.24 or the number of Microsem shaft rotations for 1 drive wheel rotation.)

Remove the hoses from a 2 outlet hopper, placing a bag or other container to catch the product. Put the product into the Microsem hopper. Engage the Microsem and drive forward the pre-measured distance. Weigh the amount of product caught in the container and convert to grams.

Ounces x 31.103481 = grams
Inches x 2.54 = cm

Use the following formula:

$$\text{Output} = \frac{10 \times \text{quantity weighed (g)}}{\text{Inter-rows (cm)} \times 2}$$

Example:

Inter-rows = 60 cm (23.63")
Quantity weighed = 60 grams (1.929 oz)

If you require 8 kg/ha or 8 lb/acre, choose the ratio
 $\frac{5}{5} \times 0.24 = 0.384$
A=12, B=18, C=12

If you require 11 kg/ha or 11 lb/acre, choose the ratio
 $\frac{5}{5} \times 0.24 = 0.528$
A=12, B=22, C=20

$$\text{Output} = \frac{10 \times 60}{60 \times 2} = 5 \text{ kg/ha or } 5 \text{ lb/acre}$$

From the following chart, find the closest sprocket combination to achieve appropriate lbs/acre.

Note: Because of the large variety of insecticides and its density and irregularity of granulars, it is impossible to provide an exact chart. This is a close approximation only.


MICROSEM MICROGRANULAR INSECTICIDE SYSTEM

Possible Sprocket Combinations

Ratios Obtained

A	B	C	
12	35	12	----- 0.21
12	32	12	----- 0.22
12	30	12	----- 0.24
12	25	12	----- 0.29
12	22	12	----- 0.33
12	20	12	----- 0.36
12	18	12	----- 0.40
12	16	12	----- 0.45
12	15	12	----- 0.48 or
12	25	20	----- 0.48
12	23	20	----- 0.51
12	22	20	----- 0.54
12	21	20	----- 0.57
12	12	12	----- 0.60
12	24	12	----- 0.63
12	18	21	----- 0.66
25	22	12	----- 0.68
12	10	12	----- 0.72
25	20	12	----- 0.75
12	15	20	----- 0.80
25	18	12	----- 0.83
25	16	12	----- 0.94
25	15	12	----- 1 or
12	12	20	----- 1
25	22	20	----- 1.13
12	10	20	----- 1.20
25	12	12	----- 1.25
25	18	20	----- 1.40
25	10	12	----- 1.50
25	15	20	----- 1.66
25	12	20	----- 2.08
25	10	20	----- 2.50


Less Product

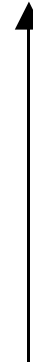

Note: The bold sprocket numbers for the interchangeable B sprocket are standard.

The remaining sprockets for the interchangeable B sprocket are available on request.
(13-14-16-23-26-35)


More Product

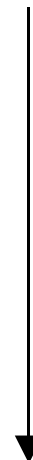

MICROSEM MICROGRANULAR INSECTICIDE SYSTEM

MICROSEM SETTING CHART - Drive sprockets to be used

These settings are theoretical and approximate. Actual output may vary. Other outputs can be obtained by using different sprocket arrangements of the Microsem drive, however travel speed variations will not affect the output.

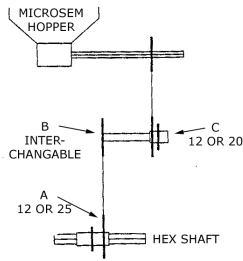

A = Double sprocket on hex shaft - driven 1
B = Interchangeable sprocket - driven 2
C = 12 or 20 tooth sprocket

	A / B / C	A / B / C	A / B / C	A / B / C	A / B / C	A / B / C	A / B / C	A / B / C
#'s per acre	5.35	6.42	7.22	8.03	9.82	11.15		
THIMET	22" 12/ 18/ 12	12/ 15/ 12	12/ 22/ 20	12/ 12/ 12	12/ 15/ 20	25/ 18/ 12		
20G	30" 12/ 22/ 20	12/ 18/ 20	25/ 20/ 12	25/ 18/ 12	25/ 15/ 12	25/ 22/ 20		
	36" 12/ 18/ 20	12/ 15/ 20	25/ 16/ 12	25/ 15/ 12	25/ 12/ 12			
	40" 25/ 22/ 12	25/ 18/ 12	25/ 15/ 12	25/ 22/ 20				

#'s per acre	5.00	6.50	8.10	9.30	10.00	11.40	13.50	
DASANIT	22"	12/ 12/ 12	25/ 22/ 12	12/ 15/ 20	25/ 18/ 12	25/ 15/ 12	25/ 22/ 20	
15G	30" 12/ 18/ 20	25/ 20/ 12	25/ 18/ 12	25/ 15/ 12	25/ 22/ 20	25/ 18/ 20		
	36" 25/ 22/ 12	25/ 16/ 12	25/ 22/ 20	25/ 12/ 12	25/ 18/ 20	25/ 15/ 20		
	40" 25/ 20/ 12	25/ 15/ 12	25/ 12/ 12	25/ 18/ 20	25/ 15/ 20	25/ 14/ 20		

#'s per acre	5.85	6.50	7.20	8.70	9.70	10.80	12.30	14.50
FURADAN	22"	12/ 25/ 12	12/ 22/ 12	12/ 20/ 12	12/ 18/ 12	12/ 22/ 12	12/ 15/ 12	12/ 12/ 12
15G	30" 12/ 22/ 12	12/ 20/ 12	12/ 18/ 12	12/ 15/ 12	12/ 22/ 20	12/ 12/ 12	25/ 22/ 12	12/ 15/ 20
	36" 12/ 18/ 12	12/ 16/ 12	12/ 15/ 12	12/ 12/ 12	12/ 18/ 20	25/ 22/ 12	12/ 15/ 20	25/ 15/ 12
	40" 12/ 16/ 12	12/ 15/ 12	12/ 22/ 20	12/ 18/ 20	25/ 22/ 12	12/ 15/ 12	25/ 15/ 12	

#'s per acre	5.40	7.13	8.91	10.70	12.50	14.25	16.04	
COUNTER 15G 22"	12/ 18/ 12	12/ 22/ 20	25/ 22/ 12	25/ 18/ 12	25/ 15/ 12	25/ 22/ 20	25/ 12/ 12	
LORSBAN 15G 30"	12/ 22/ 20	12/ 15/ 20	25/ 15/ 12	25/ 22/ 20	25/ 18/ 20	25/ 16/ 20	25/ 15/ 20	
	36" 12/ 18/ 20	25/ 16/ 12	25/ 22/ 20	25/ 18/ 20	25/ 15/ 20	25/ 14/ 20	25/ 12/ 20	
	40" 12/ 15/ 20	25/ 15/ 12	25/ 12/ 12	25/ 15/ 20	25/ 14/ 20	25/ 12/ 20		

#'s per acre	17.82	19.60	21.40	23.20				
COUNTER 15G 22"	25/ 18/ 20	25/ 16/ 20	25/ 15/ 20	25/ 14/ 20				
LORSBAN 15G 30"	25/ 14/ 20	25/ 12/ 20						

MICROSEM MICROGRANULAR INSECTICIDE SYSTEM


MICROSEM SETTING CHART - Drive sprockets to be used

These settings are theoretical and approximate. Actual output may vary. Other outputs can be obtained by using different sprocket arrangements of the Microsem drive, however travel speed variations will not affect the output.

		A / B / C	A / B / C	A / B / C	A / B / C	A / B / C	A / B / C	A / B / C	A / B / C
#'s per acre		3.56	8.90	10.95	13.35	17.80	22.25	26.70	
TEMIK 15G	22"		12 / 18 / 12	12 / 15 / 12	12 / 22 / 20	12 / 15 / 20	25 / 15 / 12	25 / 22 / 20	
GYPSUM	30"		12 / 22 / 20	12 / 18 / 20	12 / 15 / 20	25 / 12 / 12	25 / 18 / 20	25 / 15 / 20	
	36"		12 / 18 / 20	12 / 15 / 20	25 / 12 / 12	25 / 20 / 20	25 / 15 / 20	25 / 12 / 20	
	40"	12 / 25 / 12	25 / 22 / 12	25 / 18 / 12	25 / 15 / 12	25 / 18 / 20	25 / 12 / 20	25 / 12 / 20	
<hr/>									
#'s per acre		1.78	4.45	8.90					
TEMIK 15 G	22"		12 / 15 / 12	25 / 12 / 12					
CORNCOB	30"	12 / 25 / 12	25 / 22 / 12	25 / 18 / 20					
GRIT	36"	12 / 22 / 12	12 / 15 / 20	25 / 15 / 20					
	40"	12 / 18 / 12	25 / 15 / 12	25 / 12 / 20					
<hr/>									
#'s per acre		2.70	3.20	3.70	4.50	5.60	6.70	7.80	9.40
ZENECA	22"	12 / 25 / 12	12 / 22 / 12	12 / 18 / 12	12 / 15 / 12	12 / 12 / 12	25 / 22 / 12	25 / 18 / 12	25 / 15 / 12
FORCE	30"	12 / 18 / 12	12 / 15 / 12	12 / 22 / 20	25 / 22 / 12	12 / 15 / 20	25 / 15 / 12	25 / 22 / 20	25 / 18 / 20
3G	36"	12 / 15 / 12	12 / 22 / 20	12 / 18 / 20	12 / 15 / 20	25 / 15 / 12	25 / 22 / 20	25 / 18 / 20	25 / 15 / 20
	38"	12 / 23 / 20	12 / 12 / 12	25 / 22 / 12	25 / 18 / 12	25 / 15 / 12	25 / 12 / 12	25 / 10 / 12	
<hr/>									
#'s per acre		3.40	4.00	4.60	4.90	5.50	6.70	8.10	10.10
RIDOMIL	22"	12 / 22 / 12	12 / 18 / 12	12 / 16 / 12	12 / 15 / 12	12 / 22 / 20	12 / 18 / 20	12 / 15 / 20	25 / 15 / 12
GOLD GR	30"	12 / 16 / 12	12 / 15 / 12	12 / 22 / 20	12 / 18 / 20	25 / 20 / 12	25 / 18 / 12	25 / 22 / 12	25 / 18 / 20
PC11G	36"	12 / 22 / 20	25 / 24 / 12	12 / 18 / 20	12 / 15 / 20	25 / 18 / 12	25 / 22 / 20	25 / 12 / 12	25 / 15 / 20
	38"	12 / 21 / 20	25 / 22 / 12	25 / 22 / 12	25 / 18 / 12	25 / 15 / 12	25 / 22 / 20	25 / 18 / 20	
<hr/>									
#'s per acre		3.10	3.50	4.20	5.10	5.70	7.00	8.50	10.60
GOLD PC	22"	12 / 25 / 12	12 / 22 / 12	12 / 18 / 12	12 / 15 / 12	12 / 22 / 20	12 / 18 / 20	12 / 15 / 20	25 / 15 / 12
	30"	12 / 18 / 12	12 / 16 / 12	12 / 22 / 20	12 / 18 / 20	25 / 20 / 12	25 / 18 / 12	25 / 22 / 20	25 / 20 / 12
	36"	12 / 15 / 12	12 / 22 / 20	12 / 18 / 20	12 / 15 / 20	25 / 18 / 12	25 / 22 / 20	25 / 12 / 12	12 / 12 / 12
	38"	12 / 23 / 20	12 / 21 / 20	25 / 22 / 12	25 / 18 / 12	25 / 16 / 12	25 / 22 / 20	25 / 18 / 20	
<hr/>									
#'s per acre		13.50	16.00	20.00	22.40				
AMEBIN	22"	25 / 18 / 12	25 / 15 / 12	25 / 12 / 12	25 / 18 / 20				
	30"	25 / 22 / 20	25 / 18 / 20	25 / 15 / 20					
	36"	25 / 18 / 20	25 / 15 / 20	25 / 12 / 20					
	40"	25 / 12 / 12	25 / 13 / 20						

MICROSEM INSECTICIDE ASSEMBLY

Standard Microsem Assembly

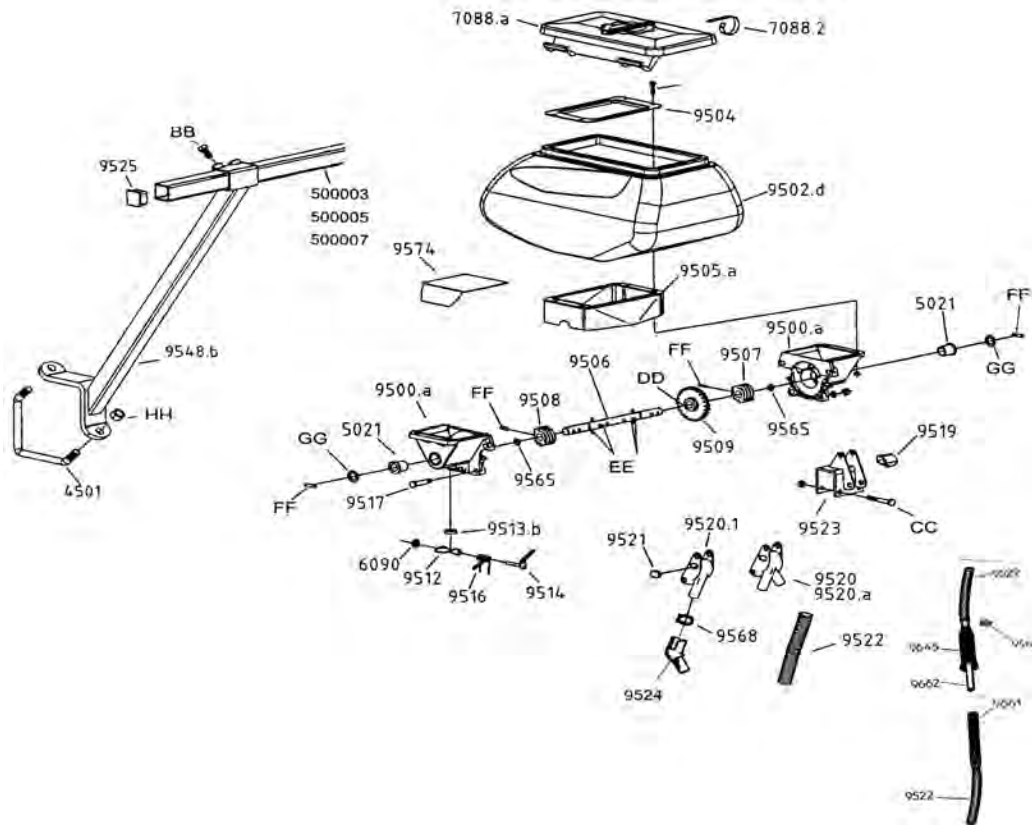

PART No. DESCRIPTION


4501	V-bolt, 16mm
5021	Self lubricated bushing
6090	Snapping, 6mm
7085.da	Drop tube, right hand
7085.ga	Drop tube, left hand
7088.a	Lid, hopper, with clip (7088.2)
7088.2	Clip, for hopper lid
9500.a	Housing(half), metering unit (replaces old 9500 & 9501 left & right sides)
9502.d	Plastic hopper only, 25 liter, -'03
9504	Steel base (hopper to meter)
9505.a	Rubber skirt
9506	4x35 roll pins)
9507	Worm gear, lft(reqrs 6x25 roll pin)
9508	Worm gear_rht(reqrs 6x25 roll pin)
9509	roll pin)
9512	Trap door (to clean out meter unit)
9513.a	Seal for trap door
9514	Lever for trap door
9516	Spring for trap door
9517	Bolt (fastens housings together)
9519	Rubber plug
9520	Two outlet chute (towards the front)
9520.a	Two outlet chute (towards the rear)

PART No. DESCRIPTION

9520.1	Single outlet
9521	Rubber plug for side of chute
9522	Hose (specify length)
9523	Clamp/mounting bracket
9524	Elbow for single outlet
9525	End cap for bar
9548.b	Support bar(for mounting to a 5x5 bar)
9548.bs	Support bar(for mounting to a 7x7 bar)
9565	Rubber O-ring
9568	Hose clamp (for 9522)
9574	Plate for hopper (to convert to single outlet)
9645	Protective Sleeve
9661	Female half of sliding drop tube assy
9662	Male half of sliding drop tube assy
500003	Carrier bar, 8' 2" long(1-1/2" square)
500005	Carrier bar, 11' 6" long(1-1/2" square)
500007	Carrier bar, 14' 9" long(1-1/2" square)
AA	10530096 - Phillips head bolt, 6 x 25
BB	F38705 - Hex bolt, 12 x 25
CC	F38623 - Hex bolt, 8 x 60
DD	10172041 - Roll pin, 4 x 25
EE	10172043 - Roll pin, 4 x 35
FF	10172090 - Roll pin, 6 x 25
GG	10622024 - Washer, 16 x 26 x 1
HH	F40179 - 16mm nylon locknut

MICROSEM INSECTICIDE ASSEMBLY

Standard Microsem Transmission

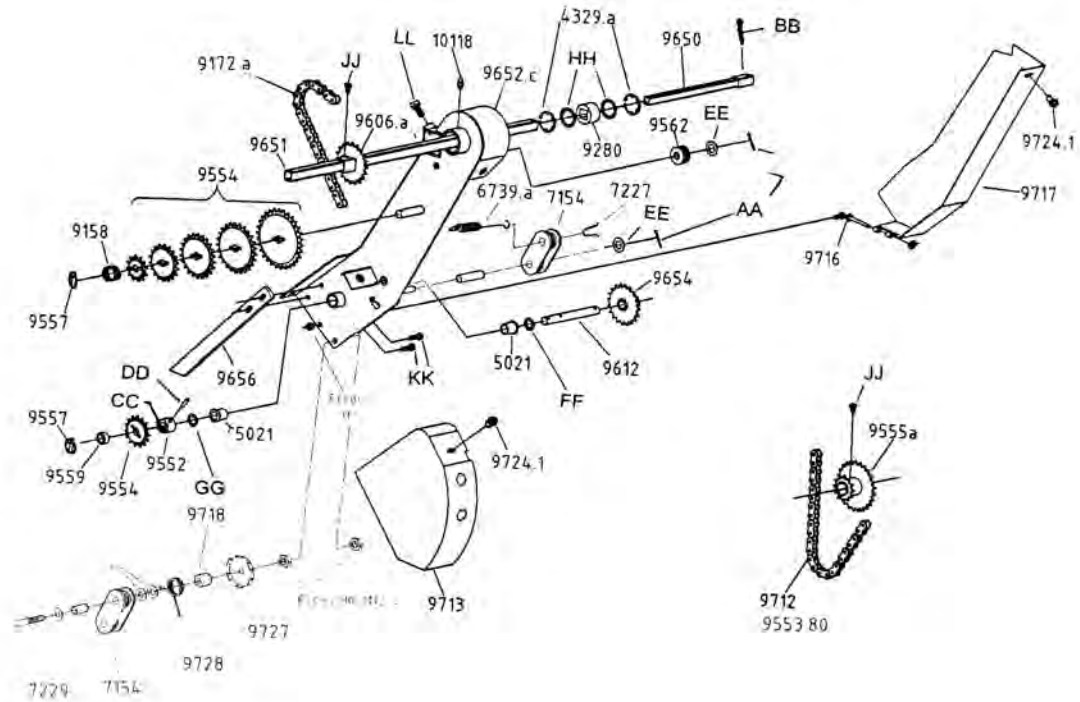

PART No. DESCRIPTION

4329.a	Snapping
5021	Self lubricated bushing
6739.a	
7154	Idler
7227	Spring stop Idler
7229	
9158	Spring (holds on extra sprockets)
9280	Bushing, nylon w/square hole
9552	Bushing, requires 2-4x25 & 1-6x30 roll pin
9553.80	Chain microsem drive
9554.11	Sprocket, 20 tooth, 5R
9554.13	Sprocket, 22 tooth, 5R(standard)
9554.16	Sprocket, 25 tooth, 5R(standard)
9554.21	Sprocket, 30 tooth, 5R(standard)
9554.26	Sprocket, 35 tooth, 5R
9554.3	Sprocket, 12 tooth, 5R(standard)
9554.4	Sprocket, 13 tooth, 5R
9554.5	Sprocket, 14 tooth, 5R
9554.6	Sprocket, 15 tooth, 5R(standard)
9554.7	Sprocket, 16 tooth, 5R
9555.a	Double sprocket, 12-25 tooth, 5R(hex bore)
9554.9	Sprocket, 18 tooth, 5R(standard)
9557	Lynch pin, small(6mm)
9559	Bushing (17mmID x 25mmOD, 10mm long)
9606.a	Sprocket, 20 tooth, 5R, top dr shaft(square)
9612	Intermediate shaft(3 holes,2 for 6x30 roll pins)
9650.09	Drive shaft(inner), 33-1/2" long
9651.09	Drive shaft(outer), 33-1/2" long

PART No. DESCRIPTION

9651.12	Drive shaft(outer), 47" long
9654	shaft
9656	Support arm (for drive frame)
9658	Bushing (12mmID x 19mmOD, 24mm long)
9712.a	Chain, 5R(106 links w/conn. link)
9713	Shield for drive chain
9716	Pivot pin weldment
9717	Shield for drive chain
9718	
9719	
9724.1	Shield keeper bolts
9727	Disc for spring, chain idler
9728	
10118	Grease zerk, 6mm, straight
642500	Complete drive shaft(33-1/2" & 47")
642502	Complete drive shaft(both 33-1/2")
AA	10170031 -Cotter pin, 3.5 x 25
BB	10170068 - Cotter pin, 5 x 45
CC	10172041 - Roll pin, 4 x 25
DD	10172091 - Roll pin, 6 x 30
EE	10621026 - Washer, 13 x 18 x 2
FF	10622024 - Washer, 16 x 26 x 1
GG	10622044 - Washer, 17 x 30 x 2
HH	10624016 - Washer, 31 x 41 x 2
JJ	F38613 - hex bolt, 8 x 12
KK	F38616 - hex bolt, 8 x 25
LL	F38705 - hex bolt, 12 x 25
MM	F38716 - hex bolt, 12 x 80

TROUBLE SHOOTING

PROBLEM:

Variations between the outlets or metering boxes.

POSSIBLE CAUSE:

- There may be foreign material mixed with the product
- **ATTENTION** there may be moisture in the product.
- The metering unit may have been assembled improperly.
- The outlet chute may be warped.
- The hose may be too long or bent, causing the hose to clog.


DRY FERTILIZER

3-Point Mounted Planters

The Monosem dry fertilizer system is precisely metered by use of an auger. The standard output is adjustable from 80-350 lbs/acre and up to 600 lbs/acre using a high output auger. A non-corrosive plastic hopper with drain plug has a capacity of from 2-row 500 lbs to 12-row 2900 lbs with single, double or ripples outlet hoppers. A flexible knife opener or a double disc opener applies fertilizer from a minimum of 2" to the side of the seed line.

ASSEMBLY AND ADJUSTMENT

The supports (1) of the fertilizer can be attached at two different widths on the hoppers, and can be easily attached to available spots on the bar. See diagram as shown below.

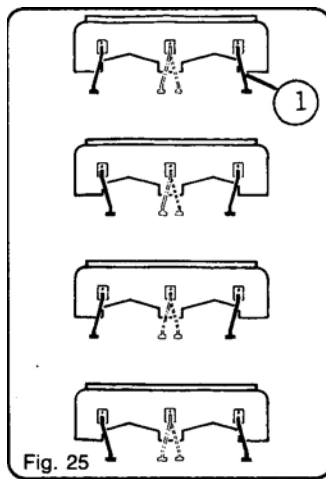

The drive is normally mounted in the center of the machine, as close as possible to the left side of the gearbox. For narrow inter-row spacing this drive can be placed on the outside of the toolbar frame. In that case, an optional bearing (#4515) can be used.

It is possible (but not necessary) to counter clamp the fertilizer opener clamps to the planting units. The two inner rows cannot always be mounted in this manner because of the hitch brackets. As half of the fertilizer knives are offset to the left and the other half are offset to the right, they can be adjusted as needed.

Note: When using double disc openers the wheels of the tractor must be perfectly centered on the inter-rows or the spring leaves will come in contact with the tires during lifting.

Note: With row spacing of less than 32" (80 cm) the double disc openers are not compatible with the standard semi-automatic hitch. Semi-automatic hitch with short shaft and pin are required, or manual hitch with pins.

Note: If the connector tubes between the hoppers are too long, they can be cut to size.

As an option, a 2-row hopper can feed 3 or 4 outlets, and a 3-row hopper can feed 4, 5, or 6 outlets. The fertilizers are then delivered with a meter specially equipped and plugs to allow certain outlets to be blocked off as desired.

The primary adjustment is set by using the lower double sprocket. **The final adjustment** is made by using one of the sprockets of the upper sprocket cluster. Outputs can thus be obtained between approximately 80 to 350 lbs/acre (80-350 kg/ha).

Different outputs can be obtained by replacing the standard auger painted blue, with a special (optional) high output auger painted red.

Because of the large variety of fertilizers and its density and irregularity of granules, it is impossible to furnish an exact setting chart. To make an initial setting, as a guide only, an output of 80 lbs/acre, approximately between 1.2 lb for each 334 feet (600-650 grams every 100 meters) is obtained with many types of fertilizers using the small lower sprocket cluster and the big upper sprocket cluster.

The placement of the fertilizer should be between 2" and 4" (6 and 10 cm) on the side of the row. A closer placement than what is recommended may cause the plant to burn and curb its growth.

Use the procedure outlined for testing the amount of fertilizer needed.

DRY FERTILIZER

3-point Mounted Planters

HOW TO TEST FOR FERTILIZER RATES

To test your desired fertilizer to determine lbs/acre use the chart below. First measure out a distance of 328 feet in a row.

1. Remove one hose from a fertilizer hopper and attach a plastic bag, or other container, under the opening in the hopper.
2. Engage the fertilizer attachment and drive forward the pre-measured distance of 328 feet (100 meters).
3. Weigh the amount of fertilizer caught in the container (in ounces).
4. Find your row spacing on the below chart, locate the approximate ounces and follow the chart up to see the approximate lbs/acre that will be applied at that setting.

CALIBRATION CHART


NOTE: Because all fertilizers do not have the same density and the granules can be irregular, it is impossible to furnish an exact setting chart.

Row Spacing	lbs per acre														
	80	90	100	110	120	130	140	150	160	170	180	190	200	210	220
12"	14	16	18	20	22	23	25	27	29	31	32	34	36	38	40
30"	20	22	24	27	29	32	34	37	39	42	44	47	49	51	54
36"	24	26	29	32	35	38	41	44	47	50	53	56	59	62	65

APPLICATION RATES

The following rates were calculated with a bulk density of 65 lbs/cubic foot. This chart is for planters that are equipped with contact drive.

IMPORTANT: Fertilizer application rates can vary from the weights calculated in this chart due to different brands, temperature, humidity, etc. These settings are theoretical and approximate. Actual output may vary. To prevent application miscalculations, make a field test

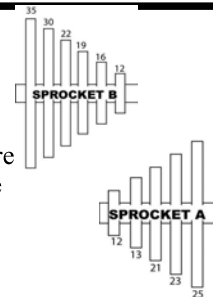


APPLICATION RATES IN LBS/ACRE

A / B	22"		30"		36"		-1	
	Standard Blue Auger	High Output Red Auger	Standard Blue Auger	High Output Red Auger	Standard Blue Auger	High Output Red Auger	Standard Blue Auger	High Output Red Auger
12/ 35	92	217	68	160	57	133	51	120
13/ 35	101	238	74	175	62	146	56	131
12/ 30	110	258	81	190	67	158	60	142
13/ 30	116	272	85	200	71	166	64	150
12/ 22	145	340	106	250	88	208	79	187
13/ 22	162	380	119	280	99	233	89	210
21/ 35	165	388	121	285	101	238	91	214
12/ 19	170	401	125	295	105	246	94	221
23/ 35	176	414	130	305	108	254	97	229
13/ 19	185	435	136	320	113	267	102	240
21/ 30	190	448	140	330	117	275	105	248
25/ 35	193	455	142	335	119	279	107	251
12/ 16	202	476	149	350	124	292	111	262
25/ 30	208	490	153	360	128	300	115	270
13/ 16	219	516	162	380	135	317	121	285
25/ 30	225	530	166	390	138	325	125	293
21/ 22	257	605	189	445	158	371	142	334
12/ 12	272	639	200	470	167	392	150	353
23/ 22	283	666	208	490	173	408	156	368
13/ 12	295	693	217	510	181	425	163	383
21/ 19	300	707	221	520	184	433	166	390
25/ 22	306	720	225	530	187	441	169	398
23/ 19	329	775	242	570	202	475	182	428
25/ 19	355	836	261	615	218	512	196	461
23/ 16	387	911	285	670	237	558	214	503
25/ 16	425	999	312	735	260	612	234	551
21/ 12	477	1122	351	825	292	687	263	619
23/ 12	520	1224	383	900	319	750	287	675
25/ 12	566	1333	417	980	347	816	312	735

DRY FERTILIZER

3-point Mounted Planters

ASSEMBLY

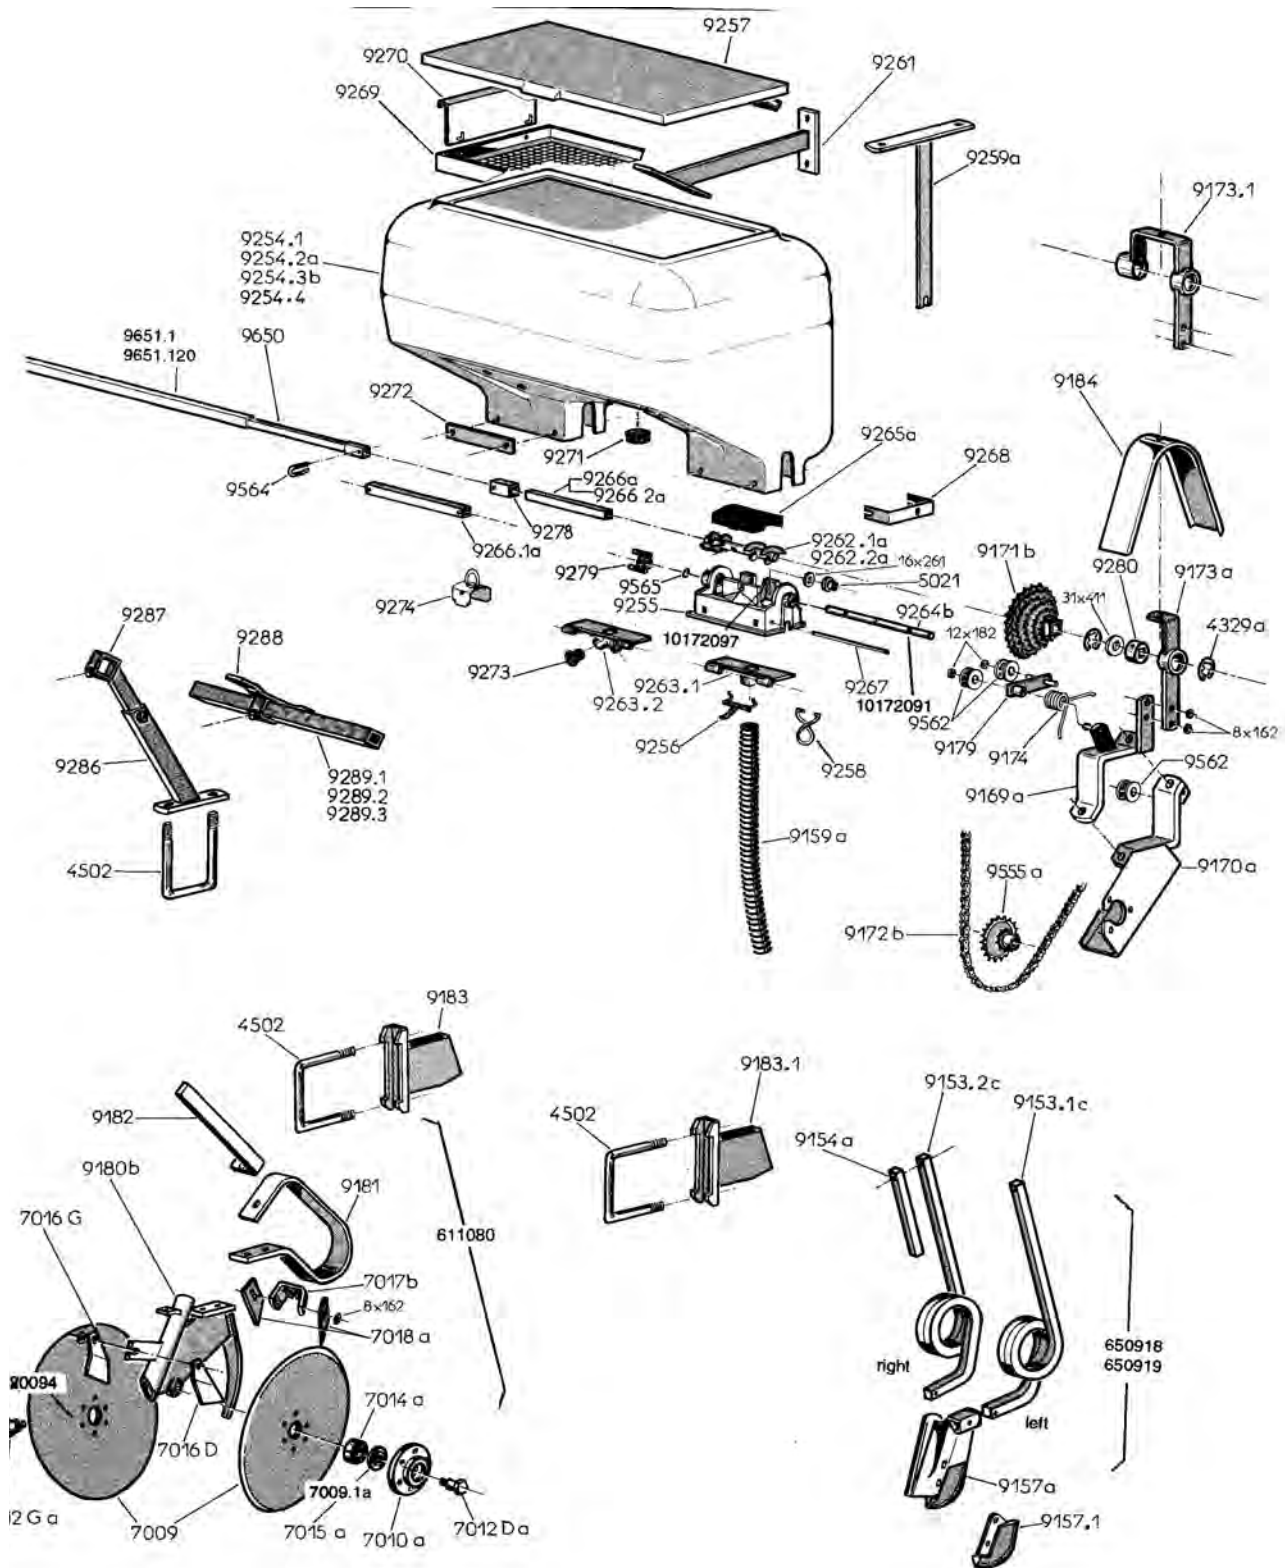

DRY FERTILIZER

ASSEMBLY

PART No.	DESCRIPTION	PART No.	DESCRIPTION
4329.a	Snapping, internal	9262.1a	Standard auger (blue)
4502	U bolt, 16mm	9262.2	High output auger (red)
4515	Bearing complete with flangettes	9262.2a	High output auger (red) w/small ends
4515.1	Bearing only (205KRRB2)	9263.1	Trap door - 1 outlet
4515.2	Flangettes (2)	9263.2	Trap door - 2 outlet
5021	Bushing (self lubricated)	9264.b	Spindle, meter assembly
7009	Disc only	9265	Auger cover, (9" wide)
7009.1a	Disc complete w/hub & bearing	9265.a	Auger cover, (4 3/4" wide)
7010.a	Hub only (mounts with 6x20 bolts)	9266.1	Telescoping drive shaft between meters, complete
7012.ga	Lefthand spindle	9266.2	Drive shaft between meters
7012.da	Righthand spindle	9267	Hinge for trap door
7014.a	Bearing	9268	Hopper reinforce strap (8x18 carriage bolt)
7015.a	Sealing washer	9269.1a	Sieve for 1 outlet hopper
7016.d	Right scraper, inside	9269.2a	Sieve for 2 outlet hopper
7016.g	Left scraper, inside	9269.3a	Sieve for 3 outlet hopper
7017.b	Bracket, for outside scrapers	9270	Sieve hanger bracket
7018.a	Outside scraper	9271	Plastic cap
9153.1c	Tine offset to the left	9272	Hopper reinforce strap (8x18 carriage bolt)
9153.2c	Tine offset to the right	9273	Plastic plug for outlet on trap door
9154.a	Reinforcement bar	9280	Bushing (square hole) supports drive shaft
9157.a	Fertilizer knife w/point	9286	Fixed mounting bracket
9157.1	Replacement cast point (5x34 rivets)	9287	Adjustable mounting bracket
9169.a	Support bracket	9288	Hopper support bracket
9170.a	Clamp bracket	9289.1	Support bar (1'4")
9171.b	Upper sprocket cluster (12-16-19-22-30-35)	9289.2	Support bar (2' 10")
9172.b	Chain, 5R (108 links w/conn link)	9289.3	Support bar (4' 6")
9173.a	Support bracket for drive shaft (single bushing)	9310.02	Drive shaft, hex (inner) (.235cm)
9173.1	Support bracket (double bushing)	9311.02	Drive shaft, hex (outer) (.215cm)
9174	Spring	9311.04	Drive shaft, hex (outer) (.38cm)
9179	Chain tightener bracket	9311.05	Drive shaft, hex, (outer) (.52cm)
9180.b	Main housing for assembly	9525	End cap
9181	Spring support for discs	9555.a	Lower sprocket cluster (12-25)
9182	Mounting bar	9555.2	Lower sprocket cluster (12-13-21-23-25)
9183	Clamp for disc assembly	9562	Chain idler roller
9183.1	Clamp for knife assembly	F38706	Bolt, 12x30
9184	Shield	F40179	Nylon locknut, 16mm
9254.1	Fertilizer hopper, 1 outlet, 225 lb capacity	10170068	Cotter pin, 5x45
9254.2a	Fertilizer hopper, 2 outlet, 400 lb capacity	10172065	Roll pin, 5x30
9254.3a	Fertilizer hopper, 3 outlet (625 lb capacity)	10172093	Roll pin, 6x40
9255	Meter housing, aluminum	10173018	Roll pin, 8x30
9255.asy	Meter assy complete, with High output auger	10176003	Rivet, 5x34 countersunk head
9256	Spring, trap door	10500094	Bolt, 6x20 (mount disc to hub)
9257.1	Metal lid for 1 outlet hopper	10508007	Bolt, 16x30
9257.2	Metal lid for 2 outlet hopper	10561053	Carriage bolt 8x18mm
9257.3	Metal lid for 3 outlet hopper	10562016	Carriage bolt 10x25
9258	Hose clamp	10621024	Washer, 13x18x2
9259.a	Support, inside 3-row hopper	10624014	Washer, 31x41x1
9261	Support inside hopper		

LIQUID FERTILIZER

3-point Mounted Planters

PUMP MOUNTING AND HOSE ARRANGEMENT


The squeeze pump is shipped with the discharge manifold in the rearward or non-operating position. Before operating or mounting the pump, position the discharge manifold in the forward or operating position and secure by tightening the wing nuts.

The pump should always be mounted even with or lower than the fertilizer tank for accurate metering. The rate of liquid fertilizer application is determined by the combination of sprockets on the squeeze pump and the drive shafts (see chart). When changing the sprocket combinations, check that the sprockets are in alignment, that the sprocket retaining collars are tight and that the chain tension is restored.


The shut-off valves should be closed to shut off the flow when the pump is not in use, either overnight, or for an extended amount of time. Also close the valves when servicing either the pump or the hoses.

To prolong the life of the hoses, the discharge manifold must be repositioned to the rearward position when not in use to prevent hose distortion.

The discharge pump must be in the forward position when the pump is in operation. To reposition the manifold, loosen the wing nuts and slide the manifold forward and sideways or rearward as required and retighten the nuts.

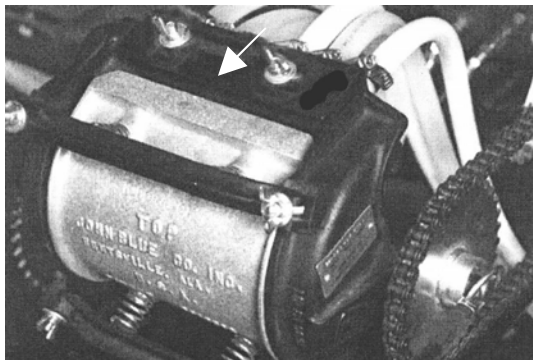

DISCHARGE MANIFOLD REARWARD

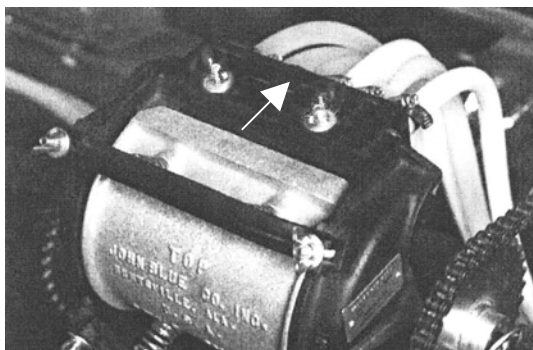

DISCHARGE MANIFOLD FORWARD



WARNING

Agricultural chemicals can be dangerous. Improper use can result in injury to persons, animals, and soil. Handle with care and follow instructions of the chemical manufacturer.

IMPORTANT

If the fertilizer is placed too close to the seed, it may cause germination or seedling damage especially if used in amounts in excess of the fertilizer manufacturer's recommendations. Check with your fertilizer dealer or manufacturer for the correct amount and placement of fertilizer.

LIQUID FERTILIZER

3-point Mounted Planters

DELIVERY RATE CHART

The following delivery rate chart provides an approximate application rate only. Actual delivery will vary with temperature and the type of fertilizer being used.

Chart is shown in gallons per acre. This chart is for a pump with a 1/2" hose. For settings with a 5/16" hose, cut gal/acre in half.

8 Tooth Driver Sprocket

Sprocket					
Part #	Driven	40"	38"	36"	30"
L-1383	8	21.9	23.1	23.9	29
L-1384	9	19.1	20.4	21.0	25.3
L-1385	10	17.2	18.3	18.9	22.7
L-1386	15	11.4	12.1	12.5	15.
L-1381	20	8.6	9.1	9.4	11.3
L-1387	22	7.7	8.2	8.5	10.2
L-1388	23	7.5	8.0	8.3	9.6
L-1389	26	6.7	7.1	7.3	8.8
L-1390	30	5.8	6.2	6.4	7.7
L-1391	31	5.6	5.9	6.1	7.4
L-1392	32	5.5	5.8	6	7.3

Gallons per Acre

15 Tooth Driver Sprocket


L-1383	8	40.0	43.0	44.5	53.3
L-1384	9	35.9	38.2	39.5	47.4
L-1385	10	32.2	34.3	39.5	42.6
L-1386	15	21.5	22.9	23.6	28.4
L-1381	20	16.1	17.1	17.7	21.3
L-1387	22	14.6	15.6	16.1	19.3
L-1388	23	14.0	14.9	15.4	18.4
L-1389	26	12.5	13.3	13.7	16.5
L-1390	30	10.7	11.4	11.8	14.2
L-1391	31	10.3	11.0	11.3	13.6
L-1392	32	10.1	10.7	11.1	13.3

Gallons per Acre

OPTIONAL PISTON PUMP

If the machine is equipped with the piston pump option, the rate of liquid fertilizer application is determined by the piston pump settings.

To adjust delivery rate, loosen the 3/8" lock nut that secured the arm with the pointer and rotate the scale flange until the pointer is over the desired scale setting. The adjustment wrench will facilitate rotation of the scale flange. Tighten the 3/8" lock nut being careful not to over tighten.

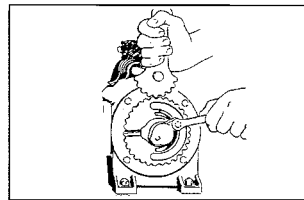

CLEANING

The tanks and all hoses are made of sturdy plastic and rubber to resist corrosion. However, the tanks, hoses and metering pump should be thoroughly cleaned with water at the end of the planting season or prior to an extended period of non-use. Do not allow fertilizer to crystallize due to cold temperature or evaporation.

On machines equipped with the piston pump, the strainer located between the piston pump and ball valve should be taken apart and cleaned daily. Remove the end cap to clean the screen

PISTON PUMP STORAGE

KEEP AIR OUT OF THE PUMP! This is the only way to prevent corrosion. Even for short periods of storage, the entrance of air into the pump will cause **RAPID AND SEVERE CORROSION.**

Overnight Storage

Suspension Fertilizer must be flushed from the pump for ANY storage period.

Winter Storage

1. Flush pump thoroughly with 5 to 10 gallons of fresh water and circulate until all corrosive salts are dissolved in the pump.
2. With the pump set on 10, draw in a mixture of half diesel fuel and half 10 weight oil until the discharge is clean. Then plug inlet and outlet

LIQUID FERTILIZER

3-point Mounted Planters

PISTON PUMP APPLICATION RATES

Pump Setting	2	3	4	5	6	7	8	9	10
4-row 30"	13	19	26	32	38	45	51	58	64
4-row 36"	11	16	21	27	32	37	43	48	54
4-row 38"	10	15	20	26	30	35	41	46	51
6-row 30"	9	13	17	21	25	30	35	39	43
6-row 36"	7	11	14	18	21	25	29	32	36
6-row 38"	7	10	13	17	20	24	27	31	34
8-row 30"	7	10	13	16	19	23	26	29	32
8-row 36"	5	8	11	13.5	16	19	21.5	24	27
8-row 38"	5	7	10	13	15	18	20	23	25
12-row 30"	4	6.5	8.5	11	13	15	17	19.5	21
12-row 36"	4	5.5	7	9	11	12.5	14.5	16	18
12-row 38"	3	5	6.5	8.5	10	12	13.5	15	17

The above chart is for planters equipped with ground drive wheels that have 7.60 x 15 tires, 26 tooth drive sprocket, and a 22 tooth driven. This chart is based on average wheel slippage and liquid viscosities. This chart is also based on standard pump sprockets of 30 tooth drive and 16 tooth driven. Other sprockets are available.

Measure and weigh one gallon of actual fertilizer solution to determine exact application rates. This chart was calculated based on a solution weighing 10 pounds per gallon.

IMPORTANT: Fertilizer application rates can vary from the above chart. To prevent application miscalculation, make field checks to be sure you are applying fertilizer to all rows at the desired rate.

NOTE: Flow to all rows should be checked periodically. If one or more lines are plugged, the desired rate will be delivered to the remaining rows keeping total application rate at desired rate.

To check the exact number of gallons your fertilizer attachment will actually deliver on 30" row spacing, proceed as follows:

1. Remove the hose from one of the fertilizer openers and insert it into a collection container that has been secured to the planter frame.
2. Engage the fertilizer attachment and drive forward for 174'.
3. Measure the fluid ounces caught in the container and multiply that amount by 100.
4. Divide that amount by 128.
5. The result will be the gallons of fertilizer delivered per acre when planting in 30" rows. Rinse the collection container and repeat test on other rows if necessary. To convert this delivery rate for wider rows, multiply by the following conversion factors:


For 36" rows, multiply by .83 by result

For 38" rows, multiply by .79 by result

LIQUID FERTILIZER

3-point Mounted Planters

SQUEEZE PUMP ASSEMBLY

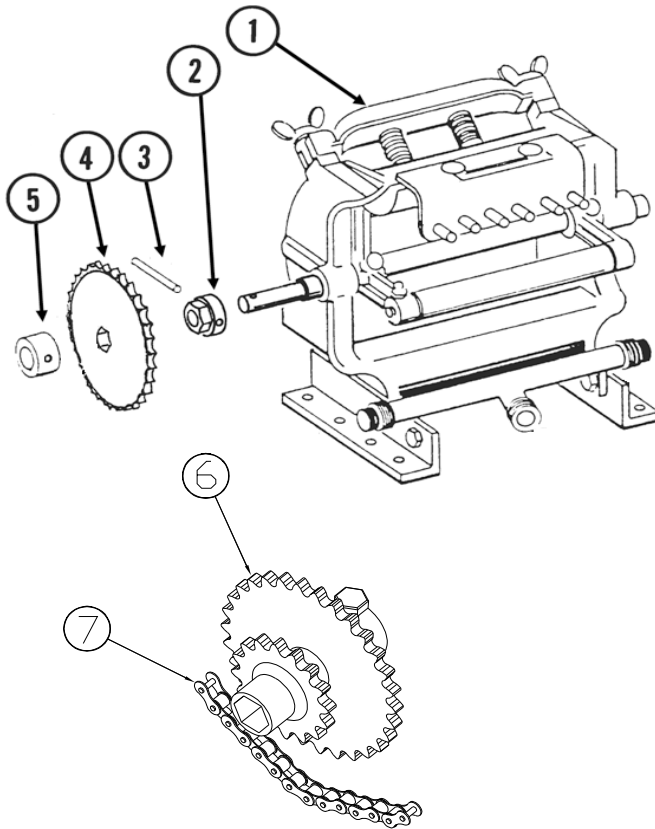

ITEM	PART No.	DESCRIPTION
1	JBL6C	SQUEEZE PUMP 2 - 6 ROWS
	JBL8LC	SQUEEZE PUMP 8 ROWS
	JBL12C	SQUEEZE PUMP 12 ROWS
2	MPL1414	7/8" SPROCKET ADAPTER
3	F64286	SPRING PIN 5/16 X 2-1/4"
4	MPL1381	SPROCKET, 20 TOOTH
	MPL1383	SPROCKET, 8 TOOTH
	MPL1384	SPROCKET, 9 TOOTH
	MPL1385	SPROCKET, 10 TOOTH
	MPL1386	SPROCKET, 15 TOOTH
	MPL1387	SPROCKET, 22 TOOTH
	MPL1388	SPROCKET, 23 TOOTH
	MPL1389	SPROCKET, 26 TOOTH
5	MPL4414	7/8" SPROCKET RETAINER
6	MPL3016	DOUBLE SPROCKET, 16-30T
7	MPL2040A	DRIVE CHAIN 4 FT.

TROUBLESHOOTING

PROBLEM: Pump hard or impossible to prime

POSSIBLE CAUSE SOLUTION
 Valves fouled or in wrong place. Inspect and clean valves.
 Air leak in suction line. Repair leak.
 Pump is set too low. Adjust pump setting.
 Packing washers are worn out. Replace.

PROBLEM: Low metering.

POSSIBLE CAUSE SOLUTION
 Valves are fouled or in wrong place. Inspect and clean valves.
 Air leak in suction line. Repair leak.
 Pump is set too low. Adjust pump setting.
 Broken valve spring. Replace spring.

PROBLEM: Over meters.

POSSIBLE CAUSE SOLUTION
 Broken discharge valve spring. Replace spring.
 Trash is under valves. Inspect and clean valves.
 Improper rate setting. Adjust pump setting.

PROBLEM: Leaks through when stopped.

POSSIBLE CAUSE SOLUTION
 Broken discharge valve spring. Replace spring.
 Trash is under valves. Inspect and clean valves.

PROBLEM: Fertilizer solution leaking under stuffing box.

POSSIBLE CAUSE SOLUTION
 Packing washers are worn out. Replace.

PROBLEM: Pump is using excessive oil.

POSSIBLE CAUSE SOLUTION
 Oil seals or o-ring worn and leaking. Replace.

PROBLEM: Pump operates noisily.

POSSIBLE CAUSE SOLUTION
 Crankcase components worn excessively. Inspect and replace if necessary.